

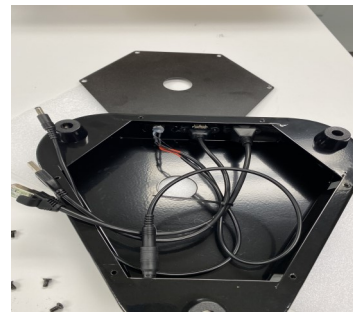


Quick Set Up: Tablet with Table Top Stand

Step 1: Unbox

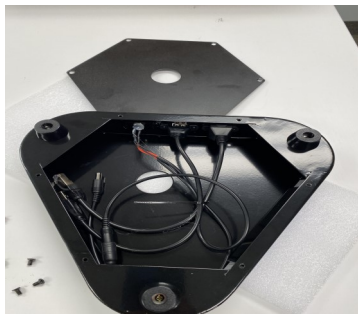

Step 2: Take Table Top Stand and Remove bottom plate to access wires.

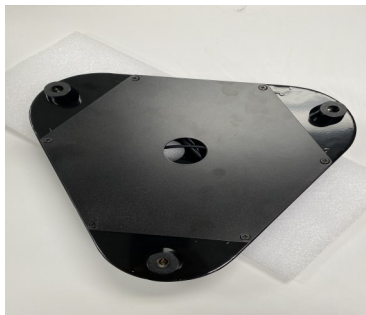

Step 3: Take Tablet out of box Then remove nut from Tablet Post




Step 4: Feed Wires Through Top of Stand

Step 5: Feed Wires through Nut



Step 6: Screw Nut onto Tablet Post

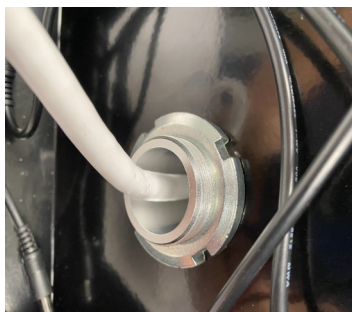


Step 7: Connect Power, Data & USB (Yellow) to the Ports provided stand connections



Step 8: Place all wires in base of stand and screw bottom plate back on




Step 9: Make Sure Tablet aligns with front of stand

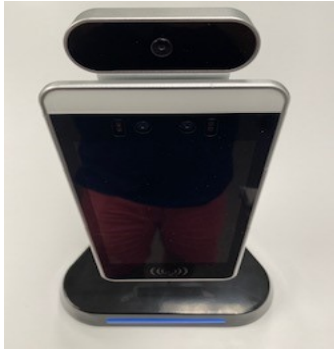

Step 10: To adjust tablet tilt—loosen top nut behind tablet on post then adjust to desired location and retighten nut



Step 11: Plug in power supply and wired mouse to access menu once Tablet is powered up

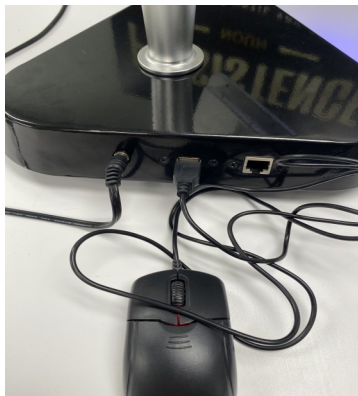

Step 12: How to connect to both menus

- ◆ Click on Scroll wheel to access menu for tablet settings —Default Password is **123456**
- ◆ Right Click to access menu for time/date settings and connecting device to WIFI— Click on setting Icon

Step 13: Software Download

If you're utilizing the software feature you will need to go to <https://www.mduinnovations.com/> or <http://www.tricon-services.com.php73-39.lan3-1.websitetestlink.com/temp-tab> to download latest copy

Step 14: If utilizing the access control feature

Contact your Access Control company to let them know you purchased a new device that needs to be connected to your system via a relay that is provided within the wiring of the tablet device

Support@mduinnovations.com / 800-266-9170